

Strongink

Xiamen Strongink Business Co.,Ltd.

www.strongink.com.cn

Strongink Slimline Pen Kit Assembly Instructions

This Instructions applies to Pen Kits

#PKSL-1,#PKSL-2,#PKSL-3,#PKSL-6,

#PKCS-1,#PKCS-2,#PKCS-3, #PKCS-5,#PKCS-6

KIT FEATURES

- Available in gold, chrome, Rose gold or gun metal plate finishes.
- Simplified construction, uses same tube lengths for all kits. (2-1/32" long).

REQUIRED ACCESSORIES

- Standard 7mm Mandrel.
- 3 Piece Standard 7mm Bushing
- 7mm Drill Bit
- 7mm Barrel Trimmer (optional)
- 2 Part Epoxy Glue

PREPARING THE BLANKS

Step 1 - Cut Wood Blanks

From 1/2" to 5/8" square stock, cut blanks to the length of the tube plus 1/16". Grain should run lengthwise.

Step 2 - Drill The Wood Blanks

Drill a 7mm centered hole lengthwise through each blank. Excessive pressure will cause the drill bit to wander and/or split the blank. Slow the feed rate and back the bit out repeatedly for chip removal.


Step 3 - Glue The Tubes Into The Blanks

Use epoxy or a gap filling cyanoacrylate. Spread the glue on the tube. Insert into the blank with a twisting motion to spread the glue evenly inside. Center each tube lengthwise in the blank. Allow it to dry.

Step 4 - Square The Ends

With a 7mm barrel trimmer or other sanding device, square the ends of the blanks 90 degrees flush to the ends of the brass tubes.

Diagram A - Turning The Blanks

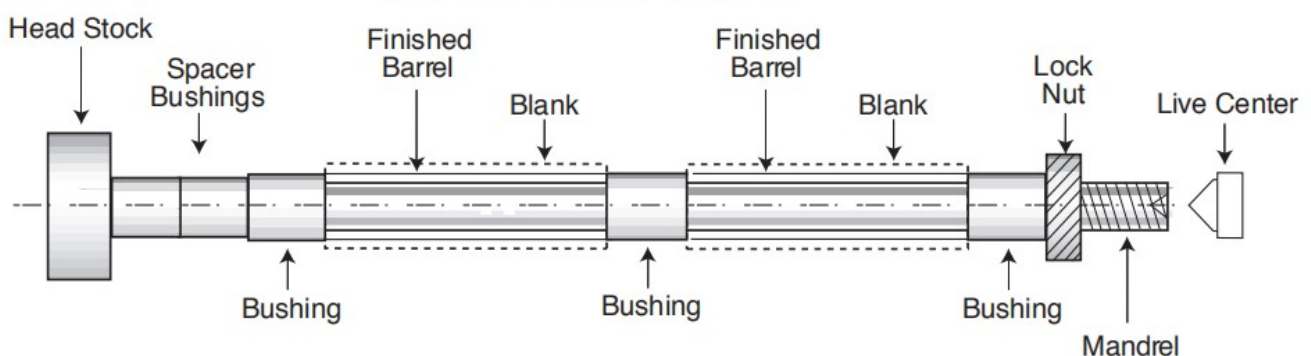

TURNING THE BLANKS

Step 5 - Turning the blanks

Place spacer bushings on the mandrel. Next, place one of the pen bushings onto the mandrel. Next, slide on either blank, then another pen bushing. Follow with the second blank then the last pen bushing. Thread on the lock nut hand tight. Bring the tail stock snug with the mandrel (do not over tighten, it could damage the mandrel). Excessive pressure may also crack the wood or acrylic blanks if it is too tight. Turn the blanks down to a diameter slightly larger than the bushings (about 11/32" O.D.). As you approach the final size be careful since the wood is only about 1/32" thick.

Step 6 - Sanding the blanks.

As with any sanding, progress through a range of lower to higher grits of sand paper. Sand with blank spinning. Progress

from 150 through to 600 grit paper. Different woods and acrylics require different methods to achieve better results.

Step 7 - Finish

Try a finish of your choice but be careful if brushing on a polyurethane, etc. You can stick the tube, bushings, and mandrel together.

Shake before using. Apply with a rag to the spinning barrel. Apply at least two coats. A variety of finishes and polishes are available

Step 8 - Touch Up

With tubes off mandrel, lay them end to end to decide which sets will look best when assembled. Remember, they will be 5/32" apart (due to center ring) so minor differences won't show. If necessary, a light sanding of the ends on a block will square the ends and improve the fit during assembly. Repeat step 7.

Diagram B - Assembly of Pen

Note: Line up parts according to layout below.

PEN ASSEMBLY

- Use a clamp or vise to press parts together.
 - Front and rear tubes are identical on the pen kits and may be mixed and matched.
- A. Press the tip into the front tube.
 - B. Press the twist mechanism (brass end first) into opposite end of same tube. Be careful, don't press it too far in!
 - C. Slide band over the exposed mechanism.
 - D. Press cap into the clip then onto the rear tube
 - E. Push the two halves together aligning grain as desired. Pen is operated by twisting the halves in opposite directions to extend or retract point. Test the extension with the Cross® type refills

Diagram B - Assembly of Pen

Note: Line up parts according to layout below.

